
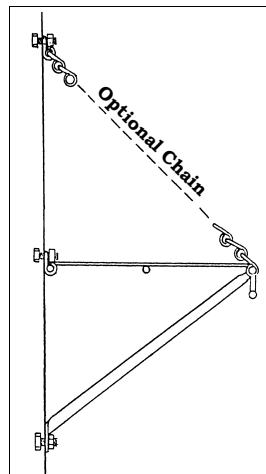


#D1455 WIRE SHELVING

Shelving & Hardware

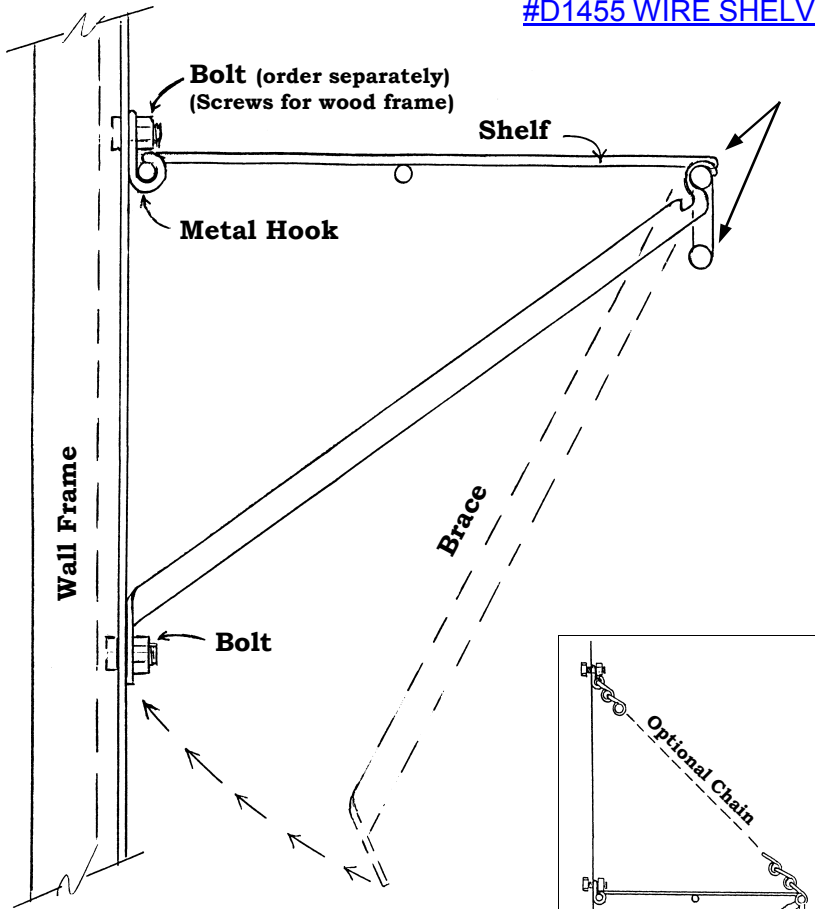

INSTALLATION INSTRUCTIONS:


1. Mark a level line on the wall or on each vertical frame at the desired shelf location.
2. Install the metal hooks on the line. Hooks must be securely installed every 24" or closer together. If farther apart than 24", provide chain support (see #8 below).
3. Place the back of the shelf into the metal hooks.
4. **IMPORTANT:** Crimp the metal hook closed around the shelf.
5. Hold the shelf level and hook a brace into the front of the shelf as illustration shows.
6. Fasten the bottom of the brace to the wall.
7. Install the remaining braces. Check that the shelf is level.
8. If the shelf will be heavily loaded, provide additional chain support (#12 steel jack chain) to the wall as illustrated. (Order #K8487 Chain separately.)

- #D1455 12 4**
- 1 12" wide x 4 ft. L Shelf
 - 2 Hooks / 2 Braces (16" L)
 - 4 Screws
 - 1 Instruction Sheet

- #D1455 12 6**
- 1 12" wide x 6 ft. L Shelf
 - 3 Hooks / 3 Braces (16" L)
 - 6 Screws
 - 1 Instruction Sheet

- #D1455 16 4**
- 1 16" wide x 4 ft. L Shelf
 - 2 Hooks / 2 Braces (20" L)
 - 4 Screws
 - 1 Instruction Sheet

- #D1455 16 6**
- 1 16" wide x 6 ft. L Shelf
 - 3 Hooks / 3 Braces (20" L)
 - 6 Screws
 - 1 Instruction Sheet

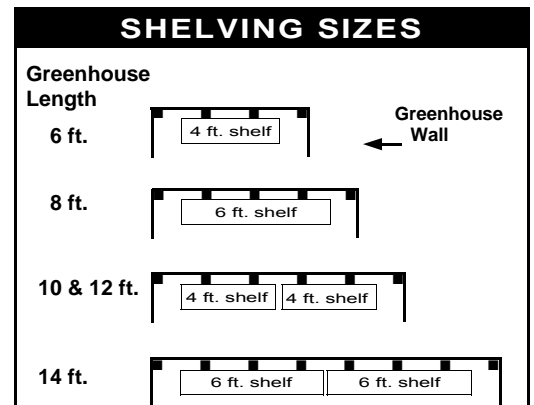

DOES NOT INCLUDE MOUNTING BOLTS

(4 ft shelves need 4 bolts each, 6 ft shelves need 6 bolts each.)

For SolarGro order #K1410 - 10 mm stainless steel bolts.

For English order #K7452 - "T" bolts.